Digital controller with off cycle defrost XR20CX

CONTENTS

001	HILHIS	
1.	GENERAL WARNING	1
2.	GENERAL DESCRIPTION	1
	CONTROLLING LOADS	1
4.	FRONT PANEL COMMANDS	1
5.	MAX & MIN TEMPERATURE MEMORIZATION	1
6.	MAIN FUNCTIONS	1
7.	PARAMETERS	2
8.	DIGITAL INPUT (ENABLED WITH P3P = N)	3
9.	TTL SERIAL LINE – FOR MONITORING SYSTEMS	3
10.	X-REP OUTPUT – OPTIONAL	3
11.	INSTALLATION AND MOUNTING	3
12.	ELECTRICAL CONNECTIONS	3
13.	HOW TO USE THE HOT KEY	3
14.	ALARM SIGNALS	3
	TECHNICAL DATA	4
16.	CONNECTIONS	4
17	DEFAULT SETTING VALUES	1

1. GENERAL WARNING

1.1 PLEASE READ BEFORE USING THIS MANUAL

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder.
 It cannot be used as a safety device.
- Check the application limits before proceeding.
- Dixell Srl reserves the right to change the composition of its products, even without notice, ensuring the same and unchanged functionality.

1.2 A SAFETY PRECAUTIONS

- . Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation
- Warning: disconnect all electrical connections before any kind of maintenance.
- Fit the probe where it is not accessible by the End User. The instrument must not be opened.
- In case of failure or faulty operation send the instrument back to the distributor or to "Dixell S.r.I." (see address) with a detailed description of the fault.
- Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.
- In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.

2. GENERAL DESCRIPTION


Model XR20C, format 32×74 mm, is a digital thermostat with off cycle defrost designed for refrigeration applications at normal temperature. It provides a relay output to drive the compressor. It is also provided with 2 NTC or PTC probe inputs, the first one for temperature control, the second one, optional, to connect to the HOT KEY terminals to signal the condenser temperature alarm or to display a temperature. The digital input can operate as third temperature probe.

The HOT KEY output allows to connect the unit, by means of the external module XJ485-CX, to a network line ModBUS-RTU compatible such as the Dixell monitoring units of X-WEB family. It allows to program the controller by means the HOT KEY programming keyboard. The instrument is fully configurable through special parameters that can be easily programmed through the keyboard.

3. CONTROLLING LOADS

3.1 COMPRESSOR

The regulation is performed according to the temperature measured by the thermostat probe with a positive differential from the set point: if the temperature increases and reaches set point plus differential the compressor is started and then turned off when the temperature reaches the set point value again.



In case of fault in the thermostat probe the start and stop of the compressor are timed through parameters "COn" and "COF".

3.2 DEFROST

Defrost is performed through a simple stop of the compressor. Parameter "IdF" controls the interval between defrost cycles, while its length is controlled by parameter "MdF".

4. FRONT PANEL COMMANDS



SET: To display target set point; in programming mode it selects a parameter or confirm an operation.

(DEF) To start a manual defrost

(UP): To see the max. stored temperature; in programming mode it browses the parameter codes or increases the displayed value.

(DOWN) To see the min stored temperature; in programming mode it browses the parameter codes or decreases the displayed value.



To switch the instrument off, if on F = oFF.

Not enabled

KEY COMBINATIONS:

To lock & unlock the keyboard.

SET + To enter in programming mode.

SET + A To return to the room temperature display.

4.1 USE OF LEDS

Each LED function is described in the following table

LED	MODE	FUNCTION	
*	ON	Compressor enabled	
欒	Flashing	Anti-short cycle delay enabled	
*	ON	Defrost enabled	
(D)	ON	An alarm is occurring	
(*)	ON	Continuous cycle is running	
※)	ON	Energy saving enabled	
°C/°F	ON	Measurement unit	
°C/°F	Flashing	Programming phase	

5. MAX & MIN TEMPERATURE MEMORIZATION

5.1 HOW TO SEE THE MIN TEMPERATURE

- Press and release the ▼ key.
- The "Lo" message will be displayed followed by the minimum temperature recorded.
- By pressing the ▼ key again or by waiting 5s the normal display will be restored.

5.2 HOW TO SEE THE MAX TEMPERATURE

- . Press and release the A key.
- 2. The "Hi" message will be displayed followed by the maximum temperature recorded.
- 3. By pressing the A key again or by waiting 5s the normal display will be restored.

5.3 HOW TO RESET THE MAX AND MIN TEMPERATURE RECORDED

- Hold press the SET key for more than 3s, while the max. or min temperature is displayed. (rSt message will be displayed)
- To confirm the operation the "rSt" message starts blinking and the normal temperature will be displayed.

6. MAIN FUNCTIONS

6.1 HOW TO SEE THE SETPOINT



- Push and immediately release the SET key: the display will show the Set point value;
- Push and immediately release the SET key or wait for 5 seconds to display the probe value again.

6.2 HOW TO CHANGE THE SETPOINT

- 1. Push the SET key for more than 2 seconds to change the Set point value;
- The value of the set point will be displayed and the "°C" or "°F" LED starts blinking;
- 3. To change the Set value push the ▲ or ▼ arrows within 10s.
- 4. To memorise the new set point value push the SET key again or wait 10s.

6.3 HOW TO START A MANUAL DEFROST



Push the DEF key for more than 2 seconds and a manual defrost will start

EMERSON

6.4 HOW TO CHANGE A PARAMETER VALUE

To change the parameter's value operate as follows:

- Enter the Programming mode by pressing the Set +

 keys for 3s (the "°C" or "°F" LED starts blinking).
- 2. Select the required parameter. Press the "SET" key to display its value
- 3. Use "UP" or "DOWN" to change its value.
- 4. Press "SET" to store the new value and move to the following parameter.

To exit: Press SET + UP or wait 15s without pressing a key.

NOTE: the set value is stored even when the procedure is exited by waiting the time-out to expire.

6.5 THE HIDDEN MENU

The hidden menu Includes all the parameters of the instrument.

6.5.1 HOW TO ENTER THE HIDDEN MENU

- Enter the Programming mode by pressing the Set +

 keys for 3s (the "°C" or "°F" LED starts blinking).
- Released the keys, then push again the Set+ ➤ keys for more than 7s. The Pr2 label will be displayed immediately followed from the HY parameter.
 NOW YOU ARE IN THE HIDDEN MENU.
- 3. Select the required parameter.
- 4. Press the "SET" key to display its value
- 5. Use ▲ or ▼ to change its value.
- 6. Press "SET" to store the new value and move to the following parameter.

To exit: Press SET + A or wait 15s without pressing a key.

NOTE1: if none parameter is present in Pr1, after 3s the "noP" message is displayed. Keep the keys pushed till the Pr2 message is displayed.

NOTE2: the set value is stored even when the procedure is exited by waiting the time-out to expire

6.5.2 HOW TO MOVE A PARAMETER FROM THE HIDDEN MENU TO THE FIRST LEVEL AND VICEVERSA.

Each parameter present in the HIDDEN MENU can be removed or put into "THE FIRST LEVEL" (user level) by pressing "SET + ▼".

In HIDDEN MENU when a parameter is present in First Level the decimal point is on.

6.6 HOW TO LOCK THE KEYBOARD

- Keep pressed for more than 3 s the UP + DOWN keys.
- The "POF" message will be displayed and the keyboard will be locked. At this point it will be possible only to see the set point or the MAX o Min temperature stored
- 3. If a key is pressed more than 3s the "POF" message will be displayed.

6.7 TO UNLOCK THE KEYBOARD

Keep pressed together for more than 3s the ▲ and ▼ keys, till the "Pon" message will be displayed.

6.8 THE CONTINUOUS CYCLE

When defrost is not in progress, it can be activated by holding the " ~ " key pressed for about 3 seconds. The compressor operates to maintain the "ccS" set point for the time set through the "CCt" parameter. The cycle can be terminated before the end of the set time using the same activation key " ~ " for 3 seconds.

6.9 THE ON/OFF FUNCTION



With "onF = oFF", pushing the ON/OFF key, the instrument is switched off. The "OFF" message is displayed. In this configuration, the regulation is disabled. To switch the instrument on, push again the ON/OFF key.

WARNING: Loads connected to the normally closed contacts of the relays are always supplied and under voltage, even if the instrument is in stand by mode.

7. PARAMETERS

REGULATION

- Hy Differential: (0,1 ÷ 25,5 C / 1÷255 F) Intervention differential for set point. Compressor Cut IN is Set Point + differential (Hy). Compressor Cut OUT is when the temperature reaches the set point.
- $\textbf{LS Minimum set point:} \ (\text{-} 50 \ \text{C} \div \text{SET/-} 58 \ \text{F} \div \text{SET}) \text{: Sets the minimum value for the set point.}$
- US Maximum set point: (SET÷110 C/SET÷230 F). Set the maximum value for set point.
- Ot Thermostat probe calibration: (-12.0÷12.0 C; -120÷120 F) allows to adjust possible offset of the thermostat probe.
- P3P Third probe presence (P3): n= not present:, the terminal operates as digital input.; y= present:, the terminal operates as third probe.
- O3 Third probe calibration (P3): (-12.0÷12.0 C; -120÷120 F). allows to adjust possible offset of the third probe.
- P4P Fourth probe presence: (n = Not present; y = present).
- o4 Fourth probe calibration: (-12.0÷12.0 C) allows to adjust possible offset of the fourth probe.
- OdS Outputs activation delay at start up: (0÷255min) This function is enabled at the initial start up of the instrument and inhibits any output activation for the period of time set in the parameter.
- AC Anti-short cycle delay: (0÷50 min) minimum interval between the compressor stop and the following restart.
- **CCt Compressor ON time during continuous cycle:** (0.0÷24.0h; res. 10min) Allows to set the length of the continuous cycle: compressor stays on without interruption for the CCt time. Can be used, for instance, when the room is filled with new products.

- CCS Set point for continuous cycle: (-50÷150 C) it sets the set point used during the continuous cycle.
- COn Compressor ON time with faulty probe: (0÷255 min) time during which the compressor is active in case of faulty thermostat probe. With COn=0 compressor is always OFF.
- COF Compressor OFF time with faulty probe: (0÷255 min) time during which the compressor is OFF in case of faulty thermostat probe. With COF=0 compressor is always active
- CH Type of action: CL = cooling; Ht = heating.

DISPLAY

- CF Temperature measurement unit: "C=Celsius; "F=Fahrenheit. WARNING: When the measurement unit is changed the SET point and the values of the parameters Hy, LS, US, Ot, ALU and ALL have to be checked and modified if necessary).
- rES Resolution (for °C): (in = 1 C; dE = 0.1 C) allows decimal point display.
- dLy Display delay: (0 ÷20.0m; risul. 10s) when the temperature increases, the display is updated of 1 C/1 F after this time.

DEFROST

- IdF Interval between defrost cycles: (0÷120h) Determines the time interval between the beginning of two defrost cycles.
- MdF (Maximum) length for defrost: (0÷255min) When P2P = n, (not evaporator probe: timed defrost) it sets the defrost duration, when P2P = y (defrost end based on temperature) it sets the maximum length for defrost.
- dFd Temperature displayed during defrost: (rt = real temperature; it = temperature at defrost start; SEt = set point; dEF = "dEF" label)
- dAd MAX display delay after defrost: (0÷255min). Sets the maximum time between the end of defrost and the restarting of the real room temperature display.

ALARMS

ALC Temperature alarms configuration: (Ab; rE)

Ab= absolute temperature: alarm temperature is given by the ALL or ALU values. rE = temperature alarms are referred to the set point. Temperature alarm is enabled when the temperature exceeds the "SET+ALU" or "SET-ALL" values.

- ALU MAXIMUM temperature alarm: (SET÷110 C; SET÷230 F) when this temperature is reached the alarm is enabled, after the "ALd" delay time.
- **ALL Minimum temperature alarm:** $(-50.0 \div SET C; -58 \div 230 F)$ when this temperature is reached the alarm is enabled, after the "ALd" delay time.
- **AFH Differential for temperature alarm recovery:** (0,1÷25,5 C; 1÷45 F) Intervention differential for recovery of temperature alarm.
- ALd Temperature alarm delay: (0÷255 min) time interval between the detection of an alarm condition and alarm signalling.
- dAO Exclusion of temperature alarm at startup: (from 0.0 min to 23.5h) time interval between the detection of the temperature alarm condition after instrument power on and alarm signalling.

CONDENSER TEMPERATURE ALARM (detected by the fourth probe)

- AP2 Probe selection for temperature alarm of condenser: nP = no probe; P1 =thermostat probe; P2 = evaporator probe; P3 =configurable probe; P4 = Probe on Hot Key plug.
- AL2 Low temperature alarm of condenser: (-55÷150 C) when this temperature is reached the LA2 alarm is signalled, possibly after the Ad2 delay.
- Au2 High temperature alarm of condenser: (-55÷150 C) when this temperature is reached the HA2 alarm is signalled, possibly after the Ad2 delay.
- AH2 Differential for temperature condenser alarm recovery: (0,1÷25,5 C; 1÷45 F)
- Ad2 Condenser temperature alarm delay: (0÷255 min) time interval between the detection of the condenser alarm condition and alarm signalling.
- dA2 Condenser temperature alarm exclusion at start up: (from 0.0 min to 23.5h, res. 10min)
- bLL Compressor off with low temperature alarm of condenser: n = no: compressor keeps on working; Y = yes, compressor is switched off till the alarm is present, in any case regulation restarts after AC time at minimum.
- AC2 Compressor off with high temperature alarm of condenser: n = no: compressor keeps on working; Y = yes, compressor is switched off till the alarm is present, in any case regulation restarts after AC time at minimum.

DIGITAL INPUT

- i1P Digital input polarity: oP: the digital input is activated by opening the contact; CL: the digital input is activated by closing the contact.
- i1F Digital input configuration: EAL = external alarm: "EA" message is displayed; bAL = serious alarm "CA" message is displayed. PAL = pressure switch alarm, "CA" message is displayed; dor = door switch function; dEF = activation of a defrost cycle; AUS = not enabled; Htr = kind of action inversion (cooling heating); FAn = do not set it; ES = Energy saving.
- did: (0÷255 min) with i1F= EAL or i1F = bAL digital input alarm delay: delay between the detection of the external alarm condition and its signalling.

with i1F= dor: door open signalling delay

with i1F = PAL: time for pressure switch function: time interval to calculate the number of the pressure switch activation.

nPS Pressure switch number: (0 \div 15) Number of activation of the pressure switch, during the "did" interval, before signalling the alarm event (I2F= PAL).

If the nPS activation in the did time is reached, switch off and on the instrument to restart normal regulation.

- odc Compressor status when open door: no; Fan = normal; CPr; F_C = Compressor OFF.
- rrd Outputs restart after doA alarm: no = outputs not affected by the doA alarm; yES = outputs restart with the doA alarm;

 HES Temperature increase during the Energy Soving evole: (20.0, C. 20.0, C. (22.58. E)
- HES Temperature increase during the Energy Saving cycle: (-30,0 C+30,0 C/-22÷86 F) it sets the increasing value of the set point during the Energy Saving cycle.

OTHER

- Adr Serial address (1÷244): Identifies the instrument address when connected to ModBUS compatible monitoring system.
- PbC Type of probe: it allows to set the kind of probe used by the instrument: PbC = PBC probe, ntc = NTC probe.
- onF on/off key enabling: nu = disabled; oFF = enabled; ES = not set it.
- dP1 Thermostat probe display
- dP3 Third probe display- optional.
- dP4 Fourth probe display.
- rSE Real set point: (readable only), it shows the set point used during the energy saving cycle or during the continuous cycle.
- rEL Software release for internal use.
- Ptb Parameter table code: readable only.

8. DIGITAL INPUT (ENABLED WITH P3P = N)

The free voltage digital input is programmable in different configurations by the "i1F" parameter.

8.1 DOOR SWITCH INPUT (i1F = dor)

It signals the door status and the corresponding relay output status through the "odc' parameter: no, Fan = normal (any change); CPr, F_C = Compressor OFF.

Since the door is opened, after the delay time set through parameter "did", the door alarm is enabled, the display shows the message "dA" and the regulation restarts is rtr = yES. The alarm stops as soon as the external digital input is disabled again. With the door open, the high and low temperature alarms are disabled.

8.2 GENERIC ALARM (i1F = EAL)

As soon as the digital input is activated the unit will wait for "did" time delay before signalling the "EAL" alarm message. The outputs status don't change. The alarm stops just after the digital input is de-activated.

8.3 SERIOUS ALARM MODE (i1F = bAL)

When the digital input is activated, the unit will wait for "did" delay before signalling the "CA" alarm message. The relay outputs are switched OFF. The alarm will stop as soon as the digital input is de-activated.

8.4 PRESSURE SWITCH (i1F = PAL)

If during the interval time set by "did" parameter, the pressure switch has reached the number of activation of the "nPS" parameter, the "CA" pressure alarm message will be displayed. The compressor and the regulation are stopped. When the digital input is ON the compressor is always OFF.

If the nPS activation in the did time is reached, switch off and on the instrument to restart normal regulation.

8.5 START DEFROST (i1F = dFr)

It starts a defrost if there are the right conditions. After the defrost is finished, the normal regulation will restart only if the digital input is disabled otherwise the instrument will wait until the "MdF" safety time is expired.

8.6 INVERSION OF THE KIND OF ACTION: HEATING-COOLING (i1F = Htr)

This function allows to invert the regulation of the controller: from cooling to heating and viceversa.

8.7 ENERGY SAVING (i1F = ES)

The Energy Saving function allows to change the set point value as the result of the SET+ HES (parameter) sum. This function is enabled until the digital input is activated.

8.8 DIGITAL INPUTS POLARITY

The digital input polarity depends on the "i1P" parameter.

i1P=CL: the input is activated by closing the contact.

i1P=OP: the input is activated by opening the contact

9. TTL SERIAL LINE - FOR MONITORING SYSTEMS

The TTL serial line, available through the HOT KEY connector, allows by means of the external TTL/RS485 converter, XJ485-CX, to connect the instrument to a monitoring system ModBUS-RTU compatible such as the X-WEB500/3000/300.

10. X-REP OUTPUT - OPTIONAL

As optional, an X-REP can be connected to the instrument, trough the HOY KEY connector. The X-REP output **EXCLUDES** the serial connection.



To connect the X-REP to the instrument the following connectors must be used CAB-51F(1m), CAB-52F(2m), CAB-55F(5m),

11. INSTALLATION AND MOUNTING



Instrument XR20CX shall be mounted on vertical panel, in a 29x71 mm hole, and fixed using the special bracket supplied. The temperature range allowed for correct operation is 0+60 C. Avoid places subject to strong vibrations, corrosive gases, excessive dirt or humidity. The same recommendations apply to probes. Let air circulate by the cooling holes.

12. ELECTRICAL CONNECTIONS

The instrument is provided with screw terminal block to connect cables with a cross section up to 2,5 mm². Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the probe cables from the power supply cables, from the outputs and the power connections. Do not exceed the maximum current allowed on each relay, in case of heavier loads use a suitable external relay.

12.1 PROBE CONNECTION

The probes shall be mounted with the bulb upwards to prevent damages due to casual liquid infiltration. It is recommended to place the thermostat probe away from air streams to correctly measure the average room temperature. Place the defrost termination probe among the evaporator fins in the coldest place, where most ice is formed, far from heaters or from the warmest place during defrost, to prevent premature defrost termination.

13. HOW TO USE THE HOT KEY

13.1 HOW TO PROGRAM A HOT KEY FROM THE INSTRUMENT (UPLOAD)

- Program one controller with the front keypad.
- When the controller is <u>ON</u>, insert the "Hot key" and push A key; the "uPL" message appears followed a by flashing "End"
- 3. Push "SET" key and the End will stop flashing
- Turn OFF the instrument remove the "Hot Key", then turn it ON again.

NOTE: the "Err" message is displayed for failed programming. In this case push again A key if you want to restart the upload again or remove the "Hot key" to abort the operation.

13.2 HOW TO PROGRAM AN INSTRUMENT USING A HOT KEY (DOWNLOAD)

- Turn OFF the instrument
- Insert a programmed "Hot Key" into the 5 PIN receptacle and then turn the Controller ON.
- Automatically the parameter list of the "Hot Key" is downloaded into the Controller memory, the "doL" message is blinking followed a by flashing "End".
- 4. After 10 seconds the instrument will restart working with the new parameters.
- Remove the "Hot Key"...

NOTE the message "Err" is displayed for failed programming. In this case turn the unit off and then on if you want to restart the download again or remove the "Hot key" to abort the operation.

14. ALARM SIGNALS

Message	Cause	Outputs
"P1"	Room probe failure	Compressor output acc. to par. "Con" and "COF"
"P3"	Third probe failure	Outputs unchanged
"P4"	Fourth probe failure	Outputs unchanged
"HA"	Maximum temperature alarm	Outputs unchanged.
"LA"	Minimum temperature alarm	Outputs unchanged.
"HA2"	Condenser high temperature	It depends on the "Ac2" parameter
"LA2"	Condenser low temperature	It depends on the "bLL" parameter
"dA"	Door open	Compressor according to rrd
"EA"	External alarm	Output unchanged.
"CA"	Serious external alarm (i1F=bAL)	All outputs OFF.
"CA"	Pressure switch alarm (i1F=PAL)	All outputs OFF

14.1 ALARM RECOVERY

Probe alarms P1", "P3" and "P4" start some seconds after the fault in the related probe; they automatically stop some seconds after the probe restarts normal operation. Check connections before replacing the probe.

Temperature alarms "HA", "LA" "HA2" and "LA2" automatically stop as soon as the temperature returns to normal values

Alarms "EA" and "CA" (with i1F=bAL) recover as soon as the digital input is disabled. Alarm "CA" (with i1F=PAL) recovers only by switching off and on the instrument.

14.2	OTHER MESSAGES	
Pon	Keyboard unlocked.	
PoF	Keyboard locked	
noP	In programming mode: none parameter is present in Pr1 On the display or in dP2, dP3, dP4: the selected probe is nor enabled	
noA	None alarm is recorded.	

15. TECHNICAL DATA

Housing: self extinguishing ABS.

Case: XR20CX frontal 32x74 mm; depth 60mm;

Mounting: XR20CX panel mounting in a 71x29mm panel cut-out

Protection: IP20; Frontal protection: XR20CX IP65 Connections: Screw terminal block \leq 2,5 mm² wiring.

Power supply: according to the model: 12Vac/dc, ±10%; 24Vac/dc, ±10%; 230Vac ±10%,

50/60Hz, 110Vac ±10%, 50/60Hz Power absorption: 3VA max

Display: 3 digits, red LED, 14,2 mm high; Inputs: Up to 4 NTC or PTC probes.

Digital input: free voltage contact

Relay outputs: compressor SPST 8(3) A, 250Vac; or 20(8)A 250Vac

Data storing: on the non-volatile memory (EEPROM).

Kind of action: 1B; Pollution grade: 2; Software class: A.;

Rated impulsive voltage: 2500V; Overvoltage Category: II

Operating temperature: 0÷60 C; Storage temperature: -30÷85 C.

Relative humidity: 20+85% (no condensing)

Measuring and regulation range: NTC probe: -40÷110 C (-40÷230 F);

PTC probe: -50÷150 C (-58÷302 F)


Resolution: 0,1 C or 1 C or 1 F (selectable); Accuracy (ambient temp. 25°C): ±1 C ±1

digit

16. CONNECTIONS


The X-REP output excludes the TTL output.. It's present in the following codes: XR20CX-xx2xx XR20CX-xx3xx:

16.1 XR20CX - 8A COMPRESSOR

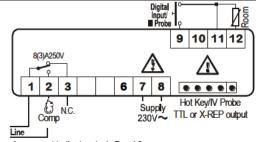

9-40Vdc supply: connect to the terminals 7 and 8. 12Vac/dc supply: connect to the terminals 7 and 8. 24Vac/dc supply: connect to the terminals 7 and 8. 120Vac supply: connect to the terminals 7 and 8.

16.2 XR20CX - 20A COMPRESSOR

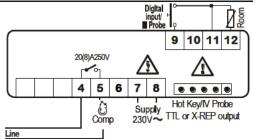

9-40Vdc supply: connect to the terminals 7 and 8.
12Vac/dc supply: connect to the terminals 7 and 8.
24Vac/dc supply: connect to the terminals 7 and 8.
120Vac supply: connect to the terminals 7 and 8.

17. DEFAULT SETTING VALUES				
Labe	Name	Range	°C/°F	
Set	Set point	LS÷US	3.0	
Ну	Differential	0,1÷25.5 C/ 1÷ 255 F	2.0	Pr1
LS	Minimum set point	-50 C÷SET/-58 F÷SET	-50.0	Pr2
US	Maximum set point	SET÷110 C/ SET ÷ 230 F	110	Pr2
Ot	Thermostat probe calibration	-12÷12 C <i>I</i> -120÷120 F	0.0	Pr1
P3P	Third probe presence	n=not present; Y=pres.	n	Pr2
03	Third probe calibration	-12÷12 C /-120÷120 F	0	Pr2
P4P	Fourth probe presence	n=not present; Y=pres.	n	Pr2
04	Fourth probe calibration	-12÷12 C /-120÷120 F	0	Pr2
OdS	Outputs delay at start up	0÷255 min	0	Pr2
AC	Anti-short cycle delay	0 ÷ 50 min	1	Pr1
CCt	Continuos cycle duration	0.0÷24.0h	0.0	Pr2
CC S	Set point for continuous cycle	(-55.0÷150,0 C) (-67÷302 F)	3	Pr2
CO n	Compressor ON time with faulty probe	0 ÷ 255 min	15	Pr2
	Compressor OFF time with faulty probe	0 ÷ 255 min	30	Pr2
CH	Kind of action	CL=cooling; Ht= heating	cL	Pr1

rES Resolution in=integer, dE= dec.point dE dLy Display temperature delay 0 ÷ 20.0 min (10 sec.) 0 ldf Interval between defrost cycles 1 ± 120 ore 8 MdF (Maximum) length for defrost ycles 0 + 255 min 20 dfd Displaying during defrost r. t, t, SEt, DEF it dAd MAX display delay after defrost 0 + 255 min 30 rE= related to set; Ab = absolute Ab MAX display delay after defrost Set= 110.0°C; Set=230°F 110 ALU MAXIMUM temperature alarm Set=110.0°C; Set=230°F 110 ALU Minimum temperature alarm -50.0°C+Set/-58°F+Set -50.0 AFH Differential for temperat. alarm (0,1 C+25,5 C) (1 F+45 F) 1 recovery 1 ALd Temperature alarm at start up 0 + 255 min 15 dAo Delay of temperature alarm of condenser Network temperat. alarm (-55 + 150 C) (-67 + 302 F) -40 AU2 Condenser for low temperat. alarm (-55 + 150 C) (-67 + 302 F) -40 AU2 Condenser for high temperat. alarm (-55 + 150 C) (-67 + 302 F) -40 AU2 Condenser temperat. alarm at start up Delay of cond. tempera. alarm at start up Delay of cond. temper. alarm at start dA2 up 0 - 254 (min.) , 255=nU 15 Delay of cond. temper. alarm at start dA2 up 0.0 ÷ 23h 50° 1,3 Compr. off for condenser low Delay in the prevalure alarm (-55 + 150 C) (-67 + 302 F) -40 AC2 Etemperature alarm (-55 + 150 C) (-67 + 302 F) -5 AC2 Etemperature alarm (-55 + 150 C) (-67 + 302 F) -5 AC3 -7 AC3	CF	Temperature measurement unit	C÷ F	С	Pr2
IdF Interval between defrost cycles MdF (Maximum) length for defrost dFd Displaying during defrost ALC Temperat. alarms configuration ALU MAXIMUM temperature alarm ALL Minimum temperature alarm ALL Minimum temperature alarm AFH Differential for temperat. alarm of recovery ALZ Condenser for low temperat. alarm Differ. for condenser temp. alar. ALZ Condenser temperature alarm delay Delay of cond. temper. alarm at start up Compr. off for condenser low bLL temperature alarm Compr. off for condenser high AC2 temperature alarm Compr. off for condenser high AC2 temperature alarm Digital input polarity Digital input alarm delay DFC (AD A) Compress status when open door rrd Regulation recovery Adr Serial address DFC (AD A) DF	rES	Resolution	in=integer; dE= dec.point	dΕ	Pr1
IdF Interval between defrost cycles	dLy	Display temperature delay	0 ÷ 20.0 min (10 sec.)	0	Pr2
dFd Displaying during defrost dAd MAX display delay after defrost ALC Temperat. alarms configuration ALU MAXIMUM temperature alarm ALL Minimum temperature alarm ALL Minimum temperature alarm AFH Differential for temperat. alarm of condenser temp. alar. ALZ Condenser for low temperat. alarm Differ. for condenser temp. alar. ALZ Condenser temperature alarm delay Delay of cond. temper. alarm at start dazer down. J. 255 m. 110 ALZ Condenser temperat. alarm at start descended by the properation of pressure dazer dazer down. J. 256 m. 125 ALZ Condenser for low temperat. alarm (-55 ÷ 150 C) (-67 ÷ 302 F) -40 AUZ Condenser for high temperat. alarm (-55 ÷ 150 C) (-67 ÷ 302 F) -40 AUZ Condenser temperature alarm delay Differ. for condenser temp. alar. AH2 recovery ALZ Condenser temperature alarm at start dazer			1 ÷ 120 ore	8	Pr1
dAd MAX display delay after defrost 0 ÷ 255 min 30 ALC Temperat. alarms configuration rE= related to set; Ab = absolute Ab ALU MAXIMUM temperature alarm Set+110.0°C; Set+230°F 110 ALL Minimum temperature alarm -50.0°C-Set/-58°F-Set -50.0 AFH Differential for temperat. alarm (0,1 C÷25,5 C) (1 F÷45 F) 1 recovery 1 1 ALD Temperature alarm delay 0 ÷ 255 min 15 dAo Delay of temperature alarm delay 0 ÷ 255 min 15 AP2 Probe for temperat. alarm of condenser nP; P1; P2; P3; P4 P4 condenser rol w temperat. alarm (-55 ÷ 150 C) (-67÷ 302 F) -40 AU2 Condenser for low temperat. alarm (-55 ÷ 150 C) (-67÷ 302 F) -40 AU2 Condenser for low temperat. alarm (-55 ÷ 150 C) (-67÷ 302 F) -40 AU2 Condenser for low temperat. alarm (-55 ÷ 150 C) (-67÷ 302 F) -40 AU2 Condenser for low temperat. alarm (-55 ÷ 150 C) (-67÷ 302 F) -110 Differ. for condenser temp. alar. -45 F] -40 AU2 Condenser temperature alarm at start -50 C) (-67÷ 302 F) -110 Delay of cond. temper. alarm at start	MdF	(Maximum) length for defrost	0 ÷ 255 min	20	Pr1
ALU MAXIMUM temperature alarm ALL Minimum temperature alarm AFH Differential for temperat. alarm of ecovery ALZ Condenser for low temperat. alarm Differe. for condenser temp. alar. AHZ Condenser temperature alarm delay Delay of cond. temper. alarm delay Delay of condenser temperature alarm delay Delay of condenser temperature alarm of condenser with the precovery ALZ Condenser for low temperat. alarm (-55 ÷ 150 C) (-67 ÷ 302 F) AHZ Probe for temperat. alarm (-55 ÷ 150 C) (-67 ÷ 302 F) Differ. for condenser temp. alar. AHZ recovery ALZ Condenser temperature alarm delay Delay of cond. temper. alarm at start up Differ. for condenser temp. alar. AHZ recovery ALZ Condenser temperature alarm delay Delay of cond. temper. alarm at start up Compr. off for condenser low bLL temperature alarm L temperature alarm Compr. off for condenser low bLL temperature alarm Digital input polarity Digital input polarity Digital input configuration AC2 temperature alarm delay Delay of cond. temper delay O + 255 min O	dFd	Displaying during defrost	rt, it, SEt, DEF	it	Pr2
ALU MAXIMUM temperature alarm ALL Minimum temperature alarm (0,1 C+25,5 C) (1 F+45 F) recovery ALd Temperature alarm delay AP2 Probe for temperat alarm of condenser AP2 Probe for temperat. alarm of condenser for low temperat. alarm Differ. for condenser temp. alar. AH2 recovery AL2 Condenser for high temperat. alarm Differ. for condenser temp. alar. AH2 recovery AL2 Condenser temperature alarm delay Delay of cond. temper. alarm at start data up Compr. off for condenser low BLL temperature alarm Compr. off for condenser low BLL temperature alarm AC2 temperature alarm Compr. off for condenser high AC2 temperature alarm AC3 temperature alarm AC4 temperature alarm AC5 temperature alarm AC7 temperature alarm AC8 temperature alarm AC9 Deponing, CL closing CA1 Digital input polarity Digital input configuration AC9 EAL, bAL, PAL, dor, dEF; Htr, AUS AUS AUS AC7 Deponing, CL closing CL Digital input alarm delay Despening, CL closing CL Digital input alarm delay Despening CL closing Despening C				30	Pr2
ALU MAXIMUM temperature alarm ALL Minimum temperature alarm ALL Minimum temperature alarm AFH Differential for temperat. alarm recovery ALd Temperature alarm delay ADE Probe for temperat. alarm of condenser for high temperat. alarm Differ. for condenser temp. alar. ALZ Condenser temperature alarm at start up Delay of cond. temper. alarm at start up Delay of cond. temper. alarm at start up Delay of condenser low Delay of condenser low BLL temperature alarm Compr. off for condenser high AC2 temperature alarm AC3 temperature alarm AC4 temperature alarm AC5 temperature alarm AC6 temperature alarm AC7 temperature alarm AC8 temperature alarm AC9 temp	ALc	Temperat. alarms configuration		Ab	Pr2
ALL Minimum temperature alarm AFH Differential for temperat. alarm recovery ALd Temperature alarm delay ALD Delay of temperature alarm at start up APP Probe for temperat. alarm of condenser AL2 Condenser for low temperat. alarm Differ. for condenser temp. alar. AH2 Condenser temperature alarm at start up Differ. for condenser temp. alar. AH2 Condenser temperature alarm delay Delay of cond. temper. alarm at start up Delay of cond. temper. alarm at start up Compr. off for condenser low BLL temperature alarm Compr. off for condenser high AC2 temperature alarm Compr. off for condenser high AC3 temperature alarm Compr. off for condenser high AC4 temperature alarm Compr. off for condenser high AC5 temperature alarm Compr. off for condenser high AC6 temperature alarm AC7 temperature alarm Compr. off for condenser high AC8 temperature alarm Compr. off for condenser high AC9 temperature alarm Compr. off for condenser high Compr. off for condenser high AC9 temperature alarm Compr. off for condenser high Compr. off for condenser high AC9 temperature alarm Compr. off for condenser high Compr. off for condenser high AC9 temperature alarm Compr. off for condenser high	ALU	MAXIMUM temperature alarm		110	Pr1
AFH Differential for temperat. alarm recovery ALd Temperature alarm delay Delay of temperature alarm at start up APP Probe for temperat. alarm of condenser Condenser For low temperat. alarm Differ. for condenser temp. alar. AH2 Condenser temperature alarm at start up Differ. for condenser temp. alar. AH2 recovery AL2 Condenser temperature alarm (-55 ÷ 150 C) (-67 ÷ 302 F) AU2 Condenser temperature alarm Differ. for condenser temp. alar. AH2 recovery AU3 Condenser temperature alarm delay Delay of cond. temper. alarm at start up Delay of cond. temper. alarm at start up Compr. off for condenser low BLL temperature alarm Compr. off for condenser high AC2 temperature alarm Compr. off for condenser high AC2 temperature alarm Compr. off for condenser high AC3 temperature alarm Compr. off for condenser high AC4 temperature alarm Compr. off for condenser high AC5 temperature alarm n(0) - Y(1) n EAL, bAL, PAL, dor, dEF; Htr, AUS did Digital input configuration EAL, bAL, PAL, dor, dEF; Htr, AUS did Digital input alarm delay nPS Number of activation of pressure switch odc Compress status when open door rrd Regulation restart with door open alarm HES Differential for Energy Saving (-30 C+30 C) (-54 F+54 F) AGF Serial address 0 -247 1 PbC Kind of probe Ptc; ntc nu dP1 Room probe display	ALL	Minimum temperature alarm	-50.0°C÷Set/ -58°F÷Set	-50.0	Pr1
ALd Temperature alarm delay dAo Delay of temperature alarm at start up Delay of temperature alarm at start up AL2 Condenser for low temperat. alarm O ÷ 23h e 50' I.3 AP2 Probe for temperat. alarm of condenser AL2 Condenser for low temperat. alarm Differ. for condenser temp. alar. AH2 recovery AL2 Condenser temperature alarm delay Delay of cond. temper. alarm at start day Delay of cond. temper. alarm at start day Compr. off for condenser low bLL temperature alarm Compr. off for condenser high AC2 temperature alarm Compr. off for condenser high Digital input polarity OP=opening;CL=closing ITP Digital input alarm delay O+255min OP=opening;CL=closing Compr. off of condenser high AC2 temperature alarm Digital input alarm delay O+255min Delay of cond. temper. alarm at start day OO+23h 50' OO+21h OO+21h OO+21h OO+21h OO-21h OO-22h OO-	AFH	Differential for temperat. alarm	(0,1 C÷25,5 C) (1 F÷45 F)	1	Pr2
dAo Delay of temperature alarm at start up 0 ÷ 23h e 50' 1.3 AP2 Probe for temperat. alarm of condenser nP; P1; P2; P3; P4 P4 AL2 Condenser for low temperat. alarm (-55 ÷ 150 C) (-67 ÷ 302 F) -40 AU2 Condenser for high temperat. alarm (-55 ÷ 150 C) (-67 ÷ 302 F) 110 Differ. for condenser temp. alar. [0,1 C ÷ 25,5 C] [1 F ÷ 45 F] 5 AH2 recovery 45 F] 5 Ad2 Condenser temperature alarm delay 0 ÷ 254 (min.) , 255=nU 15 Delay of cond. temper. alarm at start dA2 up 0.0 ÷ 23h 50' 1,3 Compr. off for condenser low bLL temperature alarm n(0) - Y(1) n Compr. off for condenser high AC2 temperature alarm n(0) - Y(1) n i1P Digital input polarity oP=opening;CL=closing cL i1F Digital input configuration EAL, bAL, PAL, dor; dEF; Htr, AUS dor did Digital input alarm delay 0 ÷ 255min 15 nPS Number of activation of pressure switch 0 ÷ 15 15 odc Compress status when open door no; Fan; CPr; F_C no rrd rrd Regulation restart with door open alarm (-30 C+30 C)			0 ÷ 255 min	15	Pr2
AP2 Probe for temperat. alarm of condenser AL2 Condenser for low temperat. alarm AU2 Condenser for low temperat. alarm Differ. for condenser temp. alar. AH2 recovery AU2 Condenser temperature alarm delay Delay of cond. temper. alarm at start dA2 up Compr. off for condenser low bLL temperature alarm Compr. off for condenser high AC2 temperature alarm Compr. off for condenser high AC2 temperature alarm AC3 temperature alarm Compr. off for condenser high AC4 temperature alarm Compr. off for condenser high AC5 temperature alarm Compr. off for condenser high AC5 temperature alarm Compr. off for condenser high AC6 temperature alarm Compr. off for condenser high AC7 temperature alarm Compr. off for condenser high AC7 temperature alarm Compr. off for condenser high AC8 temperature alarm Compr. off for condenser high AC9 temperature alarm Compr. off for condenser low N(0) - Y(1) Com					Pr2
AL2 Condenser for low temperat. alarm AU2 Condenser for high temperat. alarm Differ. for condenser temp. alar. AH2 recovery AU3 Condenser temperature alarm Differ. for condenser temp. alar. AH4 recovery AU4 Condenser temperature alarm delay Delay of cond. temper. alarm at start dup Compr. off for condenser low BLL temperature alarm Compr. off for condenser high AC2 temperature alarm ROD - Y(1) Digital input polarity OP=opening.CL=closing cL i1F Digital input configuration EAL, bAL, PAL, dor, dEF; Htr, AUS did Digital input alarm delay O+255min 15 nPS Number of activation of pressure switch odc Compress status when open door rrd Regulation restart with door open alarm HES Differential for Energy Saving (-30 C+30 C) (-54 F+54 F) OAdr Serial address O+247 1 PbC Kind of probe Ptc; ntc nu dP1 Room probe display	AP2	Probe for temperat, alarm of			Pr2
AU2 Condenser for high temperat. alarm Differ. for condenser temp. alar. AH2 recovery Ad2 Condenser temperature alarm delay Delay of cond. temper. alarm at start dup Compr. off for condenser low BLL temperature alarm Compr. off for condenser high AC2 temperature alarm Compr. off for condenser high AC2 temperature alarm IIP Digital input polarity Digital input configuration AC3 temperature alarm EAL, bAL, PAL, dor, dEF; Htr, AUS AUS Digital input alarm delay O ÷ 255min PS Number of activation of pressure switch Odc Compress status when open door rrd Regulation restart with door open alarm HES Differential for Energy Saving AC4 Serial address PbC Kind of probe Ord Room probe display (-55 ÷ 150 C) (-67 ÷ 302 F) 10 (-57 ÷ 302 F) 110 (-55 ÷ 150 C) (-67 ÷ 302 F) 15 5 AUS 0 ÷ 254 (min.) , 255=nU 15 0 .00 ÷ 23h 50' n n n(0) - Y(1) n n n(0) - Y(1) n compressive substance of condenser high n(0) - Y(1) n compressive number of condenser high n(0) - Y(1) n compressive number of condenser high n(0) - Y(1) n compressive number of condenser high n(0) - Y(1) n compressive number of condenser high n(0) - Y(1) n compressive number of condenser high n(0) - Y(1) n compressive number of condenser high n(0) - Y(1) n compressive number of condenser high n(0) - Y(1) n compressive number of condenser high n(0) - Y(1) n n compressive number of condenser high n(0) - Y(1) n n compressive number of condenser high n(0) - Y(1) n n compressive number of condenser high n(0) - Y(1) n n n(0) - Y(1) n n n n(0) - Y(1) n n n(0) - Y(1) n n n n n(0) - Y(1) n n n n n n n n n n n n n			(-55 ÷ 150 C) (-67÷ 302 F)	-40	Pr2
Differ. for condenser temp. alar. 45 F] 5 Ad2 Condenser temperature alarm delay 0 ÷ 254 (min.) , 255=nU 15 Delay of cond. temper. alarm at start dA2 up 0.0 ÷ 23h 50' 1.3 Compr. off for condenser low bLL temperature alarm n(0) - Y(1) n Compr. off for condenser high AC2 temperature alarm n(0) - Y(1) n ITP Digital input polarity oP=opening;CL=closing cL ifF Digital input configuration EAL, bAL, PAL, dor, dEF; Htr, AUS nPS Number of activation of pressure switch odc Compress status when open door rrd Regulation restart with door open alarm nessure status with door open alarm nessure serial and restart with door open alarm nessure no incomplete incompl					Pr2
AH2 recovery Ad2 Condenser temperature alarm delay Delay of cond. temper. alarm at start dA2 up Compr. off for condenser low bLL temperature alarm Compr. off for condenser high AC2 temperature alarm In(0) - Y(1) In In In In In In In In In I					
Delay of cond. temper. alarm at start up 0.0 ÷ 23h 50' 1,3 Compr. off for condenser low bLL temperature alarm n(0) - Y(1) n Compr. off for condenser high AC2 temperature alarm n(0) - Y(1) n ITP Digital input polarity oP=opening;CL=closing cL i1F Digital input configuration EAL, bAL, PAL, dor, dEF; Htr, AUS did Digital input alarm delay 0 ÷ 255min 15 nPS Number of activation of pressure switch 0 odc Compress status when open door no; Fan; CPr; F_C no rrd Regulation restart with door open alarm y HES Differential for Energy Saving (-30 C ÷ 30 C) (-54 F ÷ 54 F) 0 Adr Serial address 0 + 247 1 PbC Kind of probe Ptc; ntc ntc onF on/off key enabling nu, oFF; ES nu delarm nu of the probe display				5	Pr2
dA2 up	Ad2	Condenser temperature alarm delay	0 ÷ 254 (min.) , 255=nU	15	Pr2
Compr. off for condenser low bLL temperature alarm			0.0 ÷ 23h 50'	1,3	Pr2
AC2 temperature alarm i1P Digital input polarity iF Digital input configuration iF Digital input configuration iF Digital input configuration iF Digital input configuration iF Digital input alarm delay iF Digi		Compr. off for condenser low temperature alarm	n(0) - Y(1)	n	Pr2
i1P Digital input polarity oP=opening;CL=closing cL i1F Digital input configuration EAL, bAL, PAL, dor; dEF; Htr, AUS did Digital input alarm delay 0+255min 15 nPS Number of activation of pressure switch odc Compress status when open door no; Fan; CPr; F_C no rrd Regulation restart with door open alarm HES Differential for Energy Saving (-30 C+30 C) (-54 F+54 F) 0 Adr Serial address 0+247 1 PbC Kind of probe Ptc; ntc ntc onF on/off key enabling nu, oFF; ES nu dP1 Room probe display	AC2	temperature alarm	n(0) - Y(1)	n	Pr2
i1F Digital input configuration	i1P	Digital input polarity	oP=opening;CL=closing	cL	Pr1
nPS Number of activation of pressure switch 0 ÷ 15 odc Compress status when open door no; Fan; CPr; F_C no rrd Regulation restart with door open alarm n - Y y HES Differential for Energy Saving (-30 C÷30 C) (-54 F÷54 F) 0 Adr Serial address 0÷247 1 PbC Kind of probe Ptc; ntc ntc onF on/off key enabling nu, oFF; ES nu dP1 Room probe display -	i1F	Digital input configuration	EAL, bAL, PAL, dor; dEF; Htr,	dor	Pr1
nPS Number of activation of pressure switch 0 ÷ 15 odc Compress status when open door no; Fan; CPr; F_C no rrd Regulation restart with door open alarm n - Y y HES Differential for Energy Saving (-30 C÷30 C) (-54 F÷54 F) 0 Adr Serial address 0÷247 1 PbC Kind of probe Ptc; ntc ntc onF on/off key enabling nu, oFF; ES nu dP1 Room probe display -	did	Digital input alarm delay	0÷255min	15	Pr1
rrd Regulation restart with door open alarm n − Y y HES Differential for Energy Saving (-30 C÷30 C) (-54 F÷54 F) 0 Adr Serial address 0÷247 1 PbC Kind of probe Ptc; ntc ntc onF on/off key enabling nu, oFF; ES nu dP1 Room probe display -	nPS	Number of activation of pressure	0 ÷15	15	Pr2
rrd Regulation restart with door open alarm n − Y y HES Differential for Energy Saving (-30 C÷30 C) (-54 F÷54 F) 0 Adr Serial address 0÷247 1 PbC Kind of probe Ptc; ntc ntc onF on/off key enabling nu, oFF; ES nu dP1 Room probe display -	odc	Compress status when open door	no; Fan; CPr; F_C	no	Pr2
HES Differential for Energy Saving (-30 C÷30 C) (-54 F÷54 F) 0 Adr Serial address 0÷247 1 PbC Kind of probe Ptc; ntc ntc onF on/off key enabling nu, oFF; ES nu dP1 Room probe display	rrd	Regulation restart with door open			Pr2
Adr Serial address 0÷247 1 PbC Kind of probe Ptc; ntc ntc onF on/off key enabling nu, oFF; ES nu dP1 Room probe display -	HES	Differential for Energy Saving	(-30 C÷30 C) (-54 F÷54 F)	0	Pr2
PbC Kind of probe Ptc; ntc ntc onF on/off key enabling nu, oFF; ES nu dP1 Room probe display -	Adr	Serial address	0÷247		Pr2
onF on/off key enabling nu, oFF; ES nu dP1 Room probe display -					Pr1
dP1 Room probe display					Pr2
			-		Pr1
dP3 Third probe display			-	_	Pr1
			-	_	Pr2
			actual set	_	Pr2
			-	_	Pr2
Ptb Map code	Ptb	Map code		_	Pr2

Dixell



Dixell S.r.I. - Z.I. Via dell'Industria, 27 - 32010 Pieve d'Alpago (BL) ITALY Tel. +39.0437.9833 r.a. - Fax +39.0437.989313 - EmersonClimate.com/Dixell - dixell@emerson.com